



QUICK MANUAL STAT-GUN 2



Connect the air hose.
Pressure 2-4 Bar.



Air regulator, adjustment
of air pressure.



Press handle to activate ionization and
air flow, working distance 10-20 cm.



The yellow diode lights up when
the ionization is running.



Connecting charger to dc stick.
Only charging outside painting area and
with included charger.

6 Diodes explanation
By use:
Yellow light: When you use the gun and ionization is working.
Dubbel flash: internal information (Stat reader).
When Charger is conneted:
Red light: only when charging .
Yellow dubbel flasch: Fully charged.
Yellow fast flash: indication that the battery need to be charged.
Yellow slow flash: half charged.